

## Basic Instructions for Weathermatic Smartline Controller

### Setting time and date:

Turn dial to current time/date  
Press adjust value to change hour  
Press next for setting minutes  
Repeat process for setting date

### Program Start Times:

Turn dial to program start times  
Press adjust value to set the desired time for irrigation to come on.  
You generally have only one start time, unless you want different zones to come on at different times of the day. (Multiple program start times on the controller, zones will run and then start all over.)

Example of **what not to do**: Start time 1 6:00am 30 minutes run time  
Start time 2 6:30am 30 minutes run time  
Start time 3 7:00am 30 minutes run time

Zones will run, and then will start over again, continuing three times before shutting off. Please do not confuse program start times with zones.

### Setting Zone Run Times:

Turn dial to zone run times  
Press adjust value to set desired amount of time you would like each zone to run.  
Press next button for next zone and repeat process for rest of zones.

### Days to Water:

You can water by days of week, odd/even days or interval. Most common is the days of week.  
Turn dial to days to water  
Days will be flashing, press the next button  
Press the adjust value button to select on or off for that day  
Repeat process for rest of days

### Omit Days:

You can omit time, days or a date.  
Turn dial to omit times/days  
Press adjust value to select time/days or date  
Press the next button

Example: Press the adjust value button, omit days will be flashing, press the next button  
Day of week will show, press adjust value to allow or omit day. Irrigation will not come on, even if you have time on zone run times.